

NOTE: The Garbage Truck Working Can Only Have One Action At One Time

ISUZU KV800 Garbage Compactor Truck Operation Guidance

1. Pull the brake, start the engine, press the clutch pedal, pull out the PTO, the truck is working.



Pull Out	Work Position
Push In	Off-Work Position



2. Brief introduction of the Switch and Button:

Cabin Switch	Switch is in the cab
Button 1	Stop & Start (Whole truck electric box working)
Button 2	Access to Power
Button 3	Light (Control LED light in hopper ON / OFF)
Button 4	Tailgate Up (Control Tailgate rising up)
Button 5	Loading Mode (Truck for loading process)
Button 6	Discharging Mode (Truck for discharging process)
Button 7	Tailgate Clean (One cycle working when tailgate lifting up)
Button 8	Tailgate Down (Control Tailgate falling down)
Button 9	Shovel (Push Plate) Push (Push Plate move out to discharge garbage)
Button 10	Switch 10: Shovel (Push Plate) Pull (Push Plate move in and ready for next process)

Cabin Switch




Rear Switch	Switch is beside the tailgate
Button 1	AUTO Mode: press once, single cycle
Button 2	AUTO Mode: press once, continue cycle
Button 3	MANUAL Mode: press to make scraper open
Button 4	MANUAL Mode: press to make slide plate upward
Button 5	Work Light for night work
Button 6	MANUAL: press once, change to MANUAL Mode
Button 7	MANUAL Mode: press to make scraper close
Button 8	MANUAL Mode: press to make slide plate down
Button 9	LEFT: tilt device Down RIGHT: tilt device Up
Button 10	Emergency STOP: press once, stop any process once



Emergency STOP Button

PUSH IN: stop all process, Button 1~10 not working
PULL OUT: all button 1~10 working

**CEEC TRUCKS
FOR YOUR SUCCESS**

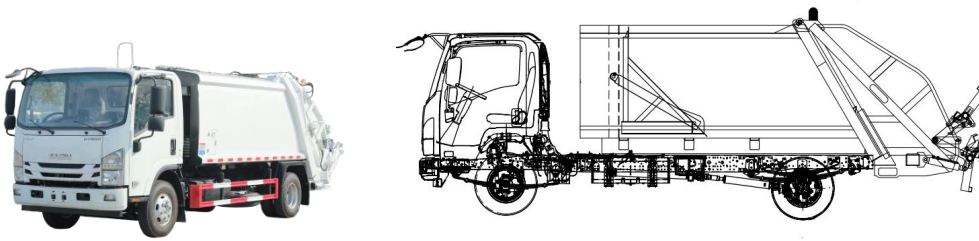

NOTE: The Garbage Truck Working Can Only Have One Action At One Time

3. Operation Guidance Step by step:

Loading Garbage	
1	Cabin Switch1 --Press the Stop & Start Button(Indicator turn Green)
2	Cabin Switch5 --Press the Loading Mode(Indicator turn Bright)
3	Rear Switch 9 --Turn to UP, the tilt device up, the garbage down to the Tail Gate hopper. Or just through garbage into the hopper directly.
4	Rear Switch9 --Turn to DOWN again to make tilt device reposition before the scraper working.
5	Rear Switch1 --Press once the "Single", compression single cycle (little garbage at Hopper)
6	Rear Switch2 --Press once the "Continue", compression continue cycle (much garbage at Hopper)
7	Rear Switch10 --Press once the "Stop", when continue cycle compression finished.
Dumping Garbage	
8	Cabin Switch6 --Press the Discharge Mode(Indicator turn Bright)
9	Cabin Switch4 --Press "Tailgate Up" to make the tail gate up.
10	Cabin Switch9 --Press "Shovel Push" to make the push plate move out.
11	Cabin Switch7 --Press "Tailgate Clean" to make single cycle working and discharge the garbage inside of tailgate. Wait until all garbage discharged.
12	Cabin Switch10 --Press "Shovel Pull" to make the push plate move in until reposition.
13	Cabin Switch8 --Press "Tailgate Down" to make the tail gate down. Please reposition all when tail gate down completely.
14	Drain out all the waste water produced by compressing work.



Waste Water Vents (Below the Tailgate)



Waste Water collection tank

Rear Switch

**CEEC TRUCKS
FOR YOUR SUCCESS**